

## **COMPUTER WARM-UP INSTRUCTION**

During the first few minutes of operation of your Bally Video Entertainment/Home Computer System, a random pattern may appear on your TV screen.

Should this occur, simply press the reset button to clear. In some rare instances, it may be necessary to turn the power switch off, then on again to completely clear the computer circuit.

Due to the sophisticated computer circuitry operation, this condition may occur until the unit has reached its stable operating temperature.