

(To connect the BASIC cartridge to your cassette recorder, you will need a cable with one mini-phone plug on each end. This can be obtained at electronic parts & similar stores.)

1. Insert the Astrocade (Bally) BASIC cartridge into the cartridge slot of your Pro Arcade and place the plastic overlay over the keypad.
2. Press the RESET button.
3. Place the Tiny Arcade tape into your cassette recorder. (Make sure the title of the program you wish to play is face up and that the tape is fully rewound.)
4. Insert one end of the cable into the jack on the BASIC cartridge. Plug the other end into the ear-phone or speaker jack of your recorder.
5. Adjust the volume control of your recorder about halfway. (If the recorder has a tone control, adjust it about halfway also)*
6. Enter :INPUT;RUN on the keypad. (Use the "Words" shift key to enter these commands-do not type them letter-by-letter.) Then press the GO key.
7. Push the play button of your recorder. The program will shortly begin loading into the computer's memory.
8. When the program starts, turn your recorder off.

The programs on this tape are recorded twice per side. If the first recording fails to load properly, press RESET then enter :INPUT;RUN and GO again. The second recording follows the first by approx. 30 seconds.

* (Because of the different circuitry of various cassette machines, it may be necessary to experiment with the volume and tone controls to get the most reliable loads.)