

# INSTRUCTIONS

Your new base is designed to give your arcade-keyboard combination 1) improved appearance, 2) keyboard protection with minimum space used and 3) the convenience of mobility.

FIG.1 Remove rubber feet (pads) if any, and with front towards you, slide keyboard forward with the keys riding just above the metal. **IMPORTANT.** Be very careful not to slice off the paint with the sharp bottom edge of the keys. **DO NOT** apply any strain to the ribbon cable.


Fig.2 Check for proper fit and height. Due to some possible differences in assemblies, shims or relocation of support blocks may be necessary. When satisfied with fit, apply Elmers (white glue) at the joint between blocks and install keyboard.

**BEFORE GLUE DRIES, RECHECK THAT KEYS CLEAR ALL EDGES AND CAN BE FULLY DEPRESSED.**

Excessive ribbon cable can be taped to inside of base.


Your Arcade actually becomes part of the enclosure when placed on top of the base as far forward as possible, just clearing the top row of keys. Thank you for your order.

FIG. 1

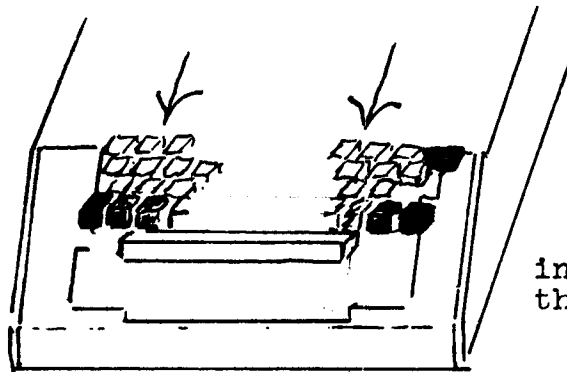

Keyboard can be installed from the bottom by first removing the support blocks on the base. Fig.1

FIG. 2

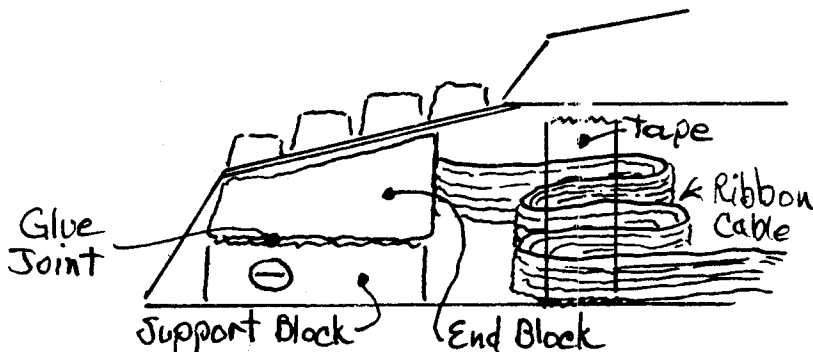

SUPPORT YOUR

**Astrocade™**