



Note Position of Old chip before removing



Points Away from Pally

Add wire Modification

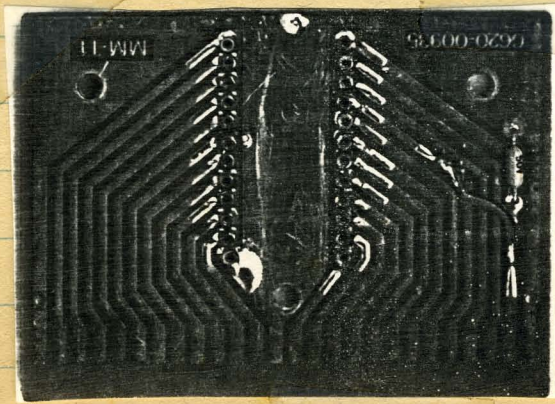

Break Foil Here

Jumper to Here

Note: I clipped the leads on the old chip



Destroy Carefully to get pins insert type

+ removed it.

Remove Unsoldered the <sup>socket size</sup> remains + drilled the holes out. Then I mounted in the board insert type sockets (IC Pin size) + soldered on top of board. You may Remove the one's from the enclosed green sockets + use them if desired.