



Note Position of Old chip before removing

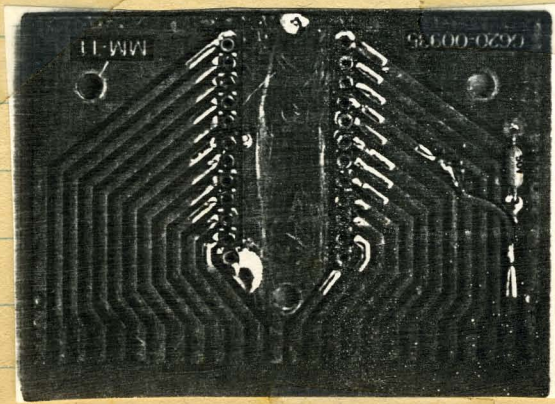

Points
Away
from Pally

276

Add wire
Modification

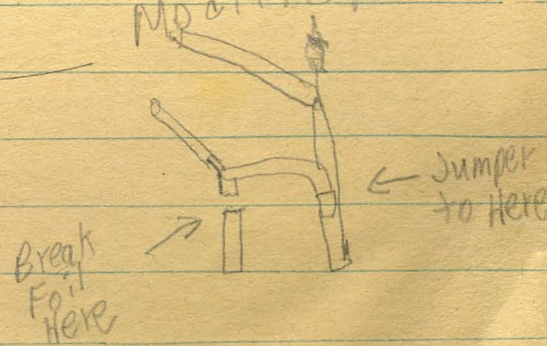

Note: I clipped the leads on the old chip



Destroy
Carefully
to get pins
insert type

+ removed it.

Remove Unsoldered the
remains, + drilled the holes out. Then
I mounted in the board insert type sockets
(IC Pin size) + soldered on top of board. You may
Remove the one's from the enclosed green sockets + use them if desired.